
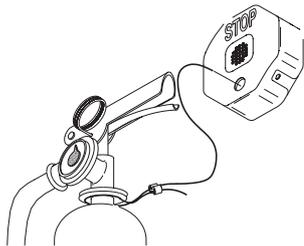
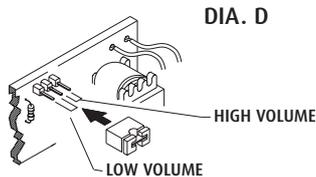
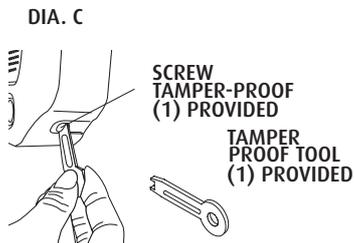
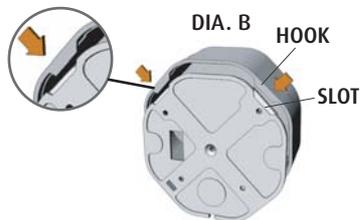


EXTINGUISHER THEFT STOPPER

This sturdy, tamper-proof, self-contained device helps prevent the theft, misuse or vandalism of fire extinguishers. Experience has shown its highly visible 'stop sign' design is itself an effective deterrent. The device contains a 9 vdc battery, a piercing alarm and a unique patented steel-cable-operated switch mechanism. When installing, the steel cable is inserted into the unit, when the extinguisher is removed and the steel cable is pulled out, the alarm sounds. Re-inserting the cable silences the alarm and re-activates the device.

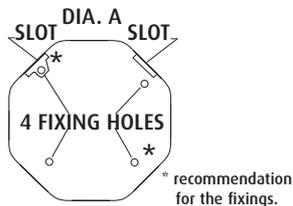

SPARES	
STI 6204	Service Cable
STI 6205	Operating Cable Kit
STI 6206	Operating Cable Crimp
F021	Tamper Key
BAT9VDC	9V Alkaline Battery

Installation Data for STI6200 & STI6200-TX

IMPORTANT NOTICE: If you have purchased a STI 6200-TX model, before installation you will need to 'learn' the transmitter to the WCP-RF Merlin Pro. Please refer to the WCP-RF Merlin Pro installation and programming guide, page 13 'Adding a Wireless Device'. Once 'learned', follow steps 1-8 below.

1. Select the appropriate position for mounting Extinguisher Theft Stopper (STI6200 and STI6200-TX) so that the cable can be crimped around the neck of the extinguisher. Ensure the positioning does not obstruct the access of the extinguisher if required in an emergency.
2. Remove the cover from the unit using the tamper tool provided. At this point do not remove the deactivation cable supplied with the unit.
3. Mark the fixing positions using the base as a template (See Dia. A adjacent).
4. Secure the base into position using the 2 fixings provided. (See Dia. A for recommendation^{*)}
5. Disconnect the battery and remove the deactivation cable. Insert one end of the operating cable into the alarm unit, reconnect the battery and replace cover.
6. To fix the cover to the base, hooks can be found on the inside top edge of the cover. Insert the hooks into the slots provided on the edge of the base (See Dia. B adjacent) and snap the cover down until it clicks into place. Using the tamper tool provided insert and tighten the screw to secure the cover to the base (See Dia. C adjacent).
7. Place the operating cable around the neck of the extinguisher and crimp aluminium seal using large pliers. Ensure that the operating cable does not interfere with the extinguishers operating mechanism.
8. Ensure that the deactivation cable is retained for when the Fire Extinguisher needs to be serviced.

To Service Fire Extinguisher

Remove the cover using the Tamper Key provided and disconnect the battery. Remove the operating cable from the alarm unit and replace with deactivation cable. If the extinguisher is being replaced a new operating cable should be fitted, order Part No. STI 6205.

To Change Battery

Remove the alarm unit cover using Tamper Key supplied. Slide battery from holder, unsnap connector and discard. Replace with equivalent 9 volt battery (STI Part No. BAT9VDC) and replace cover.

To Change Sounder Volume

The switch on the PCB is used to change the sounder output from high to low volume, please refer to picture opposite.



Safety Technology International (Europe) Limited

Unit 49G · Pipers Road · Park Farm Ind. Est. · Redditch
 Worcs · B98 0HU England
 Tel: +44 (0) 1527 520 999 · Fax: +44 (0) 1527 501 999
 E mail: info@sti-europe.com · Web Site: www.sti-europe.com



ID6200_6200TX · Revised 07/07-002 · Printed in England

Need help? Call our Technical Support Team on Freephone 0800 085 1678